



 

 

 








Original	Replacement
Power	Power
CD	Shift + 3
Tape	Shift + 5
Tuner	Shift + 6
VID 1	Shift + 1
VID 2	Shift + 2
VID 3	Shift + 4
Red/Format	Red / Netflix / Search
Green/Sound	Green / APP / Repeat
Yellow/[ ]	Yellow / YouTube / Repeat
Blue/Timer	Blue / Prime Video / Random
Violet/PC	TV/Radio /
Exit	Exit / Cancel / Clear
Menu	Menu / Home
Up	Up
Down	Down
Right	Right

Original	Replacement
Left	Left
OK	OK
Vol+	Vol+
Vol-	Vol-
PR+	CH+ / Page+
PR-	CH- / Page-
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0/--	0




































 
 
 
Original	Replacement	Original	Replacement
 AV	 AV / Input / RDS		
 <</REW	 << / Tune-		
 Play	 Play / Slow		
 >>/F.FWD	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Stop	 Stop / Hold		
 Pause	 Pause / Step / Freeze		

Original	Replacement	Original	Replacement





Original	Replacement	Original	Replacement
Power		Power	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0/--		0	
AV		AV / Input / RDS	
Mute		Mute / Dimmer	
Vol+		Vol+	
Vol-		Vol-	
PR+		CH+ / Page+	
PR-		CH- / Page-	

Original	Replacement	Original	Replacement
Menu		Menu / Home	
Exit		Exit / Cancel / Clear	
Up		Up	
Down		Down	
Left		Left	
Right		Right	
OK		OK	
Red/Format		Red / Netflix / Search	
Green/Sound		Green / APP / Repeat	
Yellow/[ ]		Yellow / YouTube / Repeat	
Blue/Timer		Blue / Prime Video / Random	
Violet/PC		TV/Radio /	
Stop		Stop / Hold	
Pause		Pause / Step / Freeze	
CD		Shift + 3	
VID 1		Eject / Surround	
Tape		Shift + 5	





























 









Original	Replacement	Original	Replacement
VID 2	 Subtitle / EQ		
Tuner	 +  Shift + 6		
VID 3	 Back / Return		
Play	 Play / Slow		
>>/F.FWD	 >> / Tune+		
<</REW	 << / Tune-		
Rec	 Rec / Rec Mode		

Original	Replacement















Original	Replacement	Original	Replacement
Power		Power	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0/--		0	
AV		AV / Input / RDS	
Mute		Mute / Dimmer	
Vol+		Vol+	
Vol-		Vol-	
PR+		CH+ / Page+	
PR-		CH- / Page-	

Original	Replacement	Original	Replacement
Menu		Menu / Home	
Exit		Exit / Cancel / Clear	
Down		Down	
Up		Up	
Left		Left	
Right		Right	
OK		OK	
Red/Format		Red / Netflix / Search	
Green/Sound		Green / APP / Repeat	
Yellow/[ ]		Yellow / YouTube / Repeat	
Blue/timer		Blue / Prime Video / Random	
Violet/PC		TV/Radio /	
Stop		Stop / Hold	
Pause		Pause / Step / Freeze	
Play		Play / Slow	
>>/F.FWD		>> / Tune+	
<</REW		<< / Tune-	



























 











Original	Replacement	Original	Replacement
Rec	 Rec / Rec Mode		
CD	 +  Shift + 3		
VID 1	 Eject / Surround		
Tape	 +  Shift + 5		
VID 2	 Subtitle / EQ		
Tuner	 +  Shift + 6		
VID 3	 Back / Return		















Original	Replacement	Original	Replacement
Power		Power	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0/--		0	
AV		AV / Input / RDS	
Mute		Mute / Dimmer	
Vol+		Vol+	
Vol-		Vol-	
PR+		CH+ / Page+	
PR-		CH- / Page-	

Original	Replacement	Original	Replacement
Menu		Menu / Home	
Exit		Exit / Cancel / Clear	
OK		OK	
Up		Up	
Down		Down	
Right		Right	
Left		Left	
Red/Format		Red / Netflix / Search	
Green/Sound		Green / APP / Repeat	
Yellow/[ ]		Yellow / YouTube / Repeat	
Blue/Timer		Blue / Prime Video / Random	
Violet/PC		TV/Radio /	
Play		Play / Slow	
>>/F.FWD		>> / Tune+	
<</REW		<< / Tune-	
Rec		Rec / Rec Mode	
Stop		Stop / Hold	





Original	Replacement
Pause	 Pause / Step / Freeze
CD	 +  Shift + 3
VID 1	 Eject / Surround
Tape	 +  Shift + 5
VID 2	 Subtitle / EQ
Tuner	 +  Shift + 6
VID 3	 Back / Return

Original	Replacement

