



Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10	 Guide / EPG / -/--
 +10	 Fav / Marker / PC
 Preset+	 >> / Preset+
 Preset-	 << / Preset-
 Vol+	 Vol+
 Vol-	 Vol-

Original	Replacement
 << / I <<	 << / Tune-
 >> / >>	 >> / Tune+
 SET	 Menu / Home
 Function	 D.Menu / Top
 Tone	 Back / Return
 Stop/Clear	 OK
 Stop Clear	 Stop / Hold
 Play/Pause CD	 Up
 Play/Pause CD	 Play / Slow
 Play Tape	 Down
 Tuner/Band	 Right
 AUX	 Shift + 7
 Rec Mute	 Mute / Dimmer
 Rec / Rec Pause	 Rec / Rec Mode
 Clock	 Setup / OPT /
 Tuner Mode	 Audio / Lang I/II
 Display	 Display / Media





Original	Replacement
 Program	 TV/Radio /
 Sleep	 Sleep / Timer
 Timer	 Shift + Sleep / Timer
 Random/Rep	 Blue / Prime Video / Random
 CD Edit/Check	 AV / Input / RDS

Original	Replacement

