
















Original	Replacement
 Power	 Power
 TV	 Shift + 1
 DVD	 Shift + 2
 Scart	 Shift + 3
 VGA	 Shift + 4
 P.M.	 Picture / Format
 S.M.	 Sound / Title
 Set Fav	 Shift + Fav / Marker / PC
 Display	 Display / Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 0	 0
 Fav	 Fav / Marker / PC
 Recall / +10	 Back / Return
 Stereo / Audio	 Audio / Lang I/II
 Vol+	 Vol+
 CH+	 CH+ / Page+
 Scan	 Smart / List
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 CH-	 CH- / Page-
 Subtitle	 Subtitle / EQ
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Enter	 OK





Original	Replacement
	Right
	Source
	Down
	Sleep / Timer
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	Eject / Surround
	Red / Netflix / Search
	Red / <<< / Tune-
	Green / APP / Repeat
	Green / >>> / Tune+
	Yellow / YouTube / Repeat
	Yellow / I<<< / Preset-
	Blue / Prime Video / Random
	Blue / >>>I / Preset+
	Title / Text

Original	Replacement
	Menu / [≡X] / D.Menu / Top
	Angle / [≡◇] / Info / Angle
	Angle / [≡◇] / Zoom / Size
	Repeat / [≡□] / Shift + Stop /
	Repeat / [≡□] / Shift + Green / APP /
	Set Up / [≡i] / Setup / OPT /
	Slow / [≡?] / Shift + Play /
	Goto / [≡⊙] / Shift + Text /
	Card / [≡...] / TV/Radio /

