





 



 









 



















 







 





 







 

 







Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	Source		AV / Input / RDS		Ch+		CH+ / Page+
	1		1		Ch-		CH- / Page-
	2		2		Settings		Setup / OPT /
	3		3		Home		Menu / Home
	4		4		Guide		Guide / EPG / -/-
	5		5		Info		Info / Angle
	6		6		E-Manual		D.Menu / Top
	7		7		Up		Up
	8		8		Down		Down
	9		9		Left		Left
	0		0		Right		Right
	TTX/MIX		Text / Goto		Enter		OK
	PRE-CH		Fav / Marker / PC		Return		Back / Return
	Mute		Mute / Dimmer		Exit		Exit / Cancel / Clear
	CH LIST		Smart / List		Red		Red / Netflix / Search
	Vol+		Vol+		Green		Green / APP / Repeat



