













 

















| Original   | Replacement   | Original | Replacement |
|------------|---|----------|-------------|
| On/Off     |  Power         |          |             |
| Mute       |  Mute / Dimmer |          |             |
| Menu Up    |  Up            |          |             |
| Menu Left  |  Left          |          |             |
| Menu Right |  Right         |          |             |
| Menu Down  |  Down          |          |             |
| Volume+    |  Vol+          |          |             |
| Chan.Up    |  CH+ / Page+   |          |             |
| Volume-    |  Vol-          |          |             |
| Chan.Down  |  CH- / Page-   |          |             |
|            |   |          |             |
|            |   |          |             |
|            |   |          |             |
|            |   |          |             |
|            |   |          |             |
|            |   |          |             |
|            |   |          |             |
|            |   |          |             |
|            |   |          |             |
|            |   |          |             |
|            |   |          |             |
|            |   |          |             |
|            |   |          |             |
|            |   |          |             |



| Original        | Replacement   | Original     | Replacement   |
|-----------------|---|--------------|---|
| Power ON/Off    |  Power                   | Tape 1 Rew   |  I<< / Preset- |
| Mute            |  Mute / Dimmer           | Tape 1 Play  |  OK            |
| Tape 1 Stop     |  Stop / Hold             | Tape 1 F.FWD |  >>I / Preset+ |
| Tape 2 Pre./eq  |  D.Menu / Top            |              |   |
| Input/Source    |  AV / Input / RDS        |              |   |
| CD/Theater      |  Menu / Home             |              |   |
| CD Play         |  Play / Slow             |              |   |
| CD F.FWD        |  >> / Tune+              |              |   |
| CD Pause        |  Pause / Step / Freeze   |              |   |
| CD Rewind       |  << / Tune-             |              |   |
| Funct./Direct   |  Exit / Cancel / Clear |              |   |
| Volume+         |  Vol+                  |              |   |
| Next/Prog+      |  CH+ / Page+           |              |   |
| Volume-         |  Vol-                  |              |   |
| Tape 1 Hall/Ats |  Display / Media       |              |   |
| Prev./Prog-     |  CH- / Page-           |              |   |
| Program         |  TV/Radio /            |              |   |

