



Original	Replacement
Power Audio	Power
Tv Direct	Shift + 0
Power DVR/DVD	Red / Netflix / Search
Power VCR	Green / APP / Repeat
Power STB	Yellow / YouTube / Repeat
Power Tv	Blue / Prime Video / Random
DVR/DVD	Fav / Marker / PC
VCR	Shift + 4
Video	Shift + 5
TV	Shift + 1
DVD Multi	Guide / EPG / -/--
FM/AM	Shift + 6
Tv/Video	TV/Radio /
Muting	Mute / Dimmer
Vol+	Vol+
Vol-	Vol-
Channel+	Shift + Audio / Lang I/II

Original	Replacement
Channel-	Shift + Setup / OPT / Tools
Tv Vol+	Shift + Vol+
Tv Vol-	Shift + Vol-
I<</Tuning-	I<< / Preset-
Play/FM Mode	Play / Slow
>>I/Tuning+	>>I / Preset+
<<	<< / Tune-
Stop/Memory	Stop / Hold
Pause	Pause / Step / Freeze
>>	>> / Tune+
Menu	Menu / Home
Top Menu/STB	D.Menu / Top
Smart Surround Setup	Sound / Title
On	Picture / Format
Up/TA/News/Inf	Up
Down/PTY	Down
Right/PTY+	Right




























 

Original	Replacement
Left/PTY-	Left
Enter	OK
fsIRate/Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
SetUp	Setup / OPT /
DVD/HDD/Title/Gr	+  Shift + 2
Zoom/→	Zoom / Size
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0

Original	Replacement
←	Back / Return
VFP/Progressive	Smart / List
Angle	Info / Angle
Ex/Es/Return	+  Shift + Back / Return
Cancel	Exit / Cancel / Clear
DVD Card/Rec	Rec / Rec Mode
Rec Pause	+  Shift + Pause / Step /
Surround	Eject / Surround
Display/Dimmer	Display / Media
Input Analog/Digital	AV / Input / RDS
L-Front+/Thumbn	+  Shift + Up
L-Front-	+  Shift + Down
Front-R+/Slide	+  Shift + Right
Front-R-	+  Shift + Left
Center+/3D/S	CH+ / Page+
Center-	CH- / Page-
Page+/Subwfr+	+  Shift + CH+ / Page+

Page+





Original	Replacement	Original	Replacement
 Page-/Subwfr-	 +  Shift + CH- /		
 Test Tone	 Text / Goto		
 Sleep	 Sleep / Timer		
 L-Surr+	 +  Shift + Smart / List		
 L-Surr-	 +  Shift + Display / Media		
 Surr-R+	 +  Shift + TV/Radio / Program		
 Surr-R-	 +  Shift + AV / Input / RDS		
 S.Back+	 +  Shift + Picture / Format		
 S.Back-	 +  Shift + D.Menu / Top Menu		



























 









Original	Replacement
Power DVD	Power
Power Audio	Shift + Power
Muting	Mute / Dimmer
Vol+	Vol+
Vol-	Vol-
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
Pause	Pause / Step / Freeze
>>	>> / Tune+
Menu	Menu / Home
Top Menu/STB	D.Menu / Top
On Screen	Picture / Format
Up	Up
Down	Down

Original	Replacement
Right	Right
Left	Left
Enter	OK
fs/Rate/Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Set Up	Setup / OPT /
DVD/HDD/Title/Gr	Blue / Prime Video / Random
Zoom/→	Zoom / Size
←	Back / Return
VFP/Progressive	Smart / List
Angle	Info / Angle
EX/Es/Return	Shift + Back / Return
Cancel	Exit / Cancel / Clear
DVD Card/Rec	Rec / Rec Mode
1	1
2	2
3	3





Original	Replacement	Original	Replacement
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 10	 Guide / EPG / -/--		
 +10	 Fav / Marker / PC		
 Surround	 Eject / Surround		
 Display/Dimmer	 Display / Media		
 Input Analog/Digital	 AV / Input / RDS		
 Thumbnail	 Yellow / YouTube / Repeat		
 Slide	 Text / Goto		
 3D/S Effect	 Sound / Title		
 Page+	 CH+ / Page+		














Original	Replacement
Power Audio	Power
FM/AM	TV/Radio /
Muting	Mute / Dimmer
Vol+	Vol+
Vol-	Vol-
I<</Tuning-	I<< / Preset-
Play/FM Mode	Play / Slow
>>I/Tuning+	>>I / Preset+
Stop/Memory	Stop / Hold
Up/TA7News/Inf	Up
Down/PTY	Down
Right/PTY+	Right
Left/PTY-	Left
On	Picture / Format
Smart Surround Setup	Smart / List
1 FM/AM	1
2 FM/AM	2

Original	Replacement
3 FM/AM	3
4 FM/AM	4
5 FM/AM	5
6 FM/AM	6
7 FM/AM	7
8 FM/AM	8
9 FM/AM	9
10 FM/AM	0
+10 FM/AM	Fav / Marker / PC
EX/ES/Return	Back / Return
Display/Dimmer	Display / Media
Decode	Shift + 2
EQ Freq	Shift + 3
Bass Boost	Shift + 4
C.Tone	Shift + 5
EQ Level+	Shift + 6
Midnight	Shift + 7





Original	Replacement	Original	Replacement
 Effect	 +  Shift + 8		
 EQ Level-	 +  Shift + 9		
 A.Position	 +  Shift + 0		

