



Original		Replacement		Original		Replacement	
	Power		Power		Play		Play / Slow
	Open/Close		Eject / Surround		Pause/Step		Pause / Step / Freeze
	1		1		Stop		Stop / Hold
	2		2		DVD Menu		D.Menu / Top
	3		3		Title		Sound / Title
	4		4		Up		Up
	5		5		Enter		OK
	6		6		Down		Down
	7		7		Right		Right
	8		8		Left		Left
	9		9		Return		Back / Return
	0		0		Display		Display / Media
	Clear		Exit / Cancel / Clear		Audio		Audio / Lang I/II
	<<		<< / Tune-		Subtitle		Subtitle / EQ
	>>		>> / Tune+		Angle		Info / Angle
	I<<		I<< / Preset-		Setup		Setup / OPT /
	>>I		>>I / Preset+		Marker		Fav / Marker / PC





Original		Replacement		Original		Replacement	
	Search		Red / Netflix / Search				
	Program		Shift + TV/Radio / Program				
	Zoom		Zoom / Size				
	Repeat		Green / APP / Repeat				
	A-B		Yellow / YouTube / Repeat				
	Resolution		TV/Radio /				
	Karaoke ECHO		Blue / Prime Video / Random				
	Power Tv		Shift + Power				
	AV Tv		AV / Input / RDS				
	PR/CH+ Tv		CH+ / Page+				
	PR/CH- Tv		CH- / Page-				
	Vol+ Tv		Vol+				
	Vol- Tv		Vol-				

