



Original	Replacement
 EPG	 Guide / EPG / -/--
 M / P	 Display / Media
 FAV	 Fav / Marker / PC
 POWER	 Power
 1	 1
 2	 2
 3	 3
 MUTE	 Mute / Dimmer
 4	 4
 5	 5
 6	 6
 AUDIO	 Audio / Lang I/II
 7	 7
 8	 8
 9	 9
 TEXT	 Text / Goto
 INFO	 Info / Angle

Original	Replacement
 0	 0
 RECALL	 Back / Return
 TIMER	 Sleep / Timer
 MENU	 Menu / Home
 UP / CH+	 Up
 P+	 Shift + CH+ /
 P+	 >> / Preset+
 LEFT / V-	 Left
 V-	 Vol-
 CH-	 CH- / Page-
 OK	 OK
 RIGHT / V+	 Right
 V+	 Vol+
 CH+	 CH+ / Page+
 EXIT	 Exit / Cancel / Clear
 DOWN / CH-	 Down
 P-	 Shift + CH- / Page-





Original		Replacement		Original		Replacement	
	P-		I<< / Preset-				
	TV/SAT		AV / Input / RDS				
	RED / TV/SAT		Red / Netflix / Search				
	TV/RADIO		TV/Radio /				
	GREEN /		Green / APP / Repeat				
	YELLOW /		Yellow / YouTube / Repeat				
	ZOOM		Zoom / Size				
	BLUE / LIST		Blue / Prime Video / Random				
	LIST		Smart / List				

