 













 



 

 





















Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0
 Tv/Radio	 TV/Radio /
 FAV	 Fav / Marker / PC
 TTX	 Text / Goto
 Subtitle	 Subtitle / EQ
 EPG	 Guide / EPG / -/--

Original	Replacement
 Setup	 Setup / OPT /
 Display	 Display / Media
 Tv/VCR	 AV / Input / RDS
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 OK
 Vol+	 Vol+
 Vol-	 Vol-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Exit	 Exit / Cancel / Clear
 Blue	 Blue / Prime Video / Random
 Red	 Red / Netflix / Search





Original	Replacement
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Replacement

