



Original	Replacement
Power	Power
Open/Close	Eject / Surround
Repeat	Green / APP / Repeat
Repeat A-B	Yellow / YouTube / Repeat
Setup	Setup / OPT /
3D	Picture / Format
Zoom	Zoom / Size
Book Mark	TV/Radio /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9

Original	Replacement
0	0
Mode	Text / Goto
Clear	Exit / Cancel / Clear
<< / Tune-	<< / Tune-
>> / Tune+	>> / Tune+
I<< / Preset-	I<< / Preset-
>>I / Preset+	>>I / Preset+
Stop / Hold	Stop / Hold
Play / Slow	Play / Slow
Pause / Step / Freeze	Pause / Step / Freeze
Top Menu / D.Menu / Top	D.Menu / Top
Menu / Home	Menu / Home
Back / Return	Back / Return
Display / Media	Display / Media
Up	Up
Down	Down
Left	Left



