



Original	Replacement
	Power
	Source
	Caption
	1
	2
	3
	4
	5
	6
	7
	8
	9
	-
	0
	PRE-CH
	Auto Prog.
	FAV.CH
	Mute
	CH+
	CH-
	Menu
	MTS
	Guide
	Tools
	Up
	Down
	Left
	Right
	Return
	Exit
	A
	B
	C
	D
	PIP
	CH-
	CH+
	P.MODE
	S.MODE
	P.SIZE
	STILL
	Left
	Pause
	Right
	Power
	AV / Input / RDS
	Subtitle / EQ
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Eject / Surround
	0
	Fav / Marker / PC
	TV/Radio /
	Shift + Fav / Marker / PC

Original	Replacement
	ADD/Del
	Vol+
	Mute
	CH+ / Page+
	Vol-
	CH List
	CH- / Page-
	Menu / Home
	Display / Media
	Guide / EPG / -/--
	Setup / OPT /
	Up
	Info / Angle
	Left
	Enter
	Right
	Back / Return
	D.Menu / Top
	Vol+
	Mute / Dimmer
	CH+ / Page+
	Vol-
	Smart / List
	CH- / Page-
	Menu / Home
	Display / Media
	Guide / EPG / -/--
	Setup / OPT /
	Up
	Info / Angle
	Left
	OK
	Right
	Back / Return





Original	Replacement	Original	Replacement
 Down	 Down	 Play	 Play / Slow
 Exit	 Exit / Cancel / Clear	 >>	 >> / Tune+
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 PIP	 Text / Goto		
 PIP CH-	  << / Preset-		
 PIP CH+	 >>  / Preset+		
 P.Mode	 Picture / Format		
 S.Mode	 Sound / Title		
 P.Size	 Zoom / Size		
 Still	 Shift + Pause / Step / Step /		
 Rec	 Rec / Rec Mode		
 Stop	 Stop / Hold		
 <<	 << / Tune-		
 Pause	 Pause / Step / Freeze		

