






Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide / EPG / -/--
 Recall	 Back / Return
 Nicam	 Shift + Audio / Lang I/II
 EPG	 Guide / EPG / -/--
 FAV	 Fav / Marker / PC

Original	Replacement
 Sleep	 Sleep / Timer
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Vol+	 Vol+
 Vol-	 Vol-
 Source	 AV / Input / RDS
 Tv/Radio	 TV/Radio /
 Audio	 Audio / Lang I/II
 Info	 Info / Angle
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK
 Menu	 Menu / Home





Original	Replacement
Exit	Exit / Cancel / Clear
Text	Text / Goto
Play/Index	Play / Slow
Pause/Mix	Pause / Step / Freeze
Stop/Reveal	Stop / Hold
<</Hold	<< / Tune-
>>/Subpage	>> / Tune+
I<</Size	I<< / Preset-
>>I/Cancel	>>I / Preset+
Sub-T	Subtitle / EQ
Rec	Rec / Rec Mode
Rec.List	Smart / List
T-Shift	Display / Media
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Original	Replacement

