
 
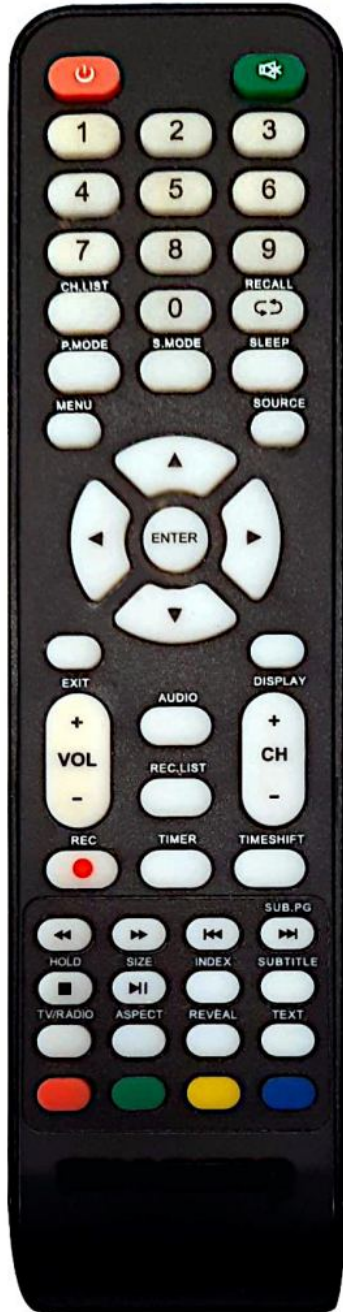






Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	CH.List		Smart / List
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Menu		Menu / Home
	Source		AV / Input / RDS
	Exit		Exit / Cancel / Clear
	Display		Display / Media
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		OK
	Vol+		Vol+
	Vol-		Vol-
	Audio		Audio / Lang I/II
	Rec List		Guide / EPG / -/-
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Rec		Rec / Rec Mode
	Timer		Shift + Sleep / Timer





Original	Replacement
 Timeshift	 D.Menu / Top
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I/Sub.Pg	 >>I / Preset+
 Stop/Hold	 Stop / Hold
 Pause/size	 Pause / Step / Freeze
 Play	 Play / Slow
 Index	 Fav / Marker / PC
 Subtitle	 Subtitle / EQ
 Tv/Radio	 TV/Radio /
 Aspect	 Zoom / Size
 Reveal	 Info / Angle
 Text	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Replacement
 Blue	 Blue / Prime Video / Random

