
 
 
 
 
 
 
 





 

 
 
 
 

 
 
 



 
 
 
 
 
 






Original	Replacement	Original	Replacement
	Setup / OPT /		Pause / Step / Freeze
	Power		Play / Slow
	D.Menu / Top		OK
	AV / Input / RDS		TV/Radio /
	Shift + Power		Smart / List
	Exit / Cancel / Clear		Fav / Marker / PC
	Stop / Hold		Info / Angle
	I<< / Preset-		Guide / EPG / -/-
	>>I / Preset+		Subtitle / EQ
	CH+ / Page+		Audio / Lang I/II
	Up		Text / Goto
	CH- / Page-		Mute / Dimmer
	Down		Vol-
	Left		Vol+
	<< / Tune-		1
	>> / Tune+		2
	Right		3





Original	Replacement
4	VIDEO 4
5	TAPE 5
6	TUNER 6
7	AUX - HDD 7
8	USB 8
9	BLUETOOTH 9
0	HDMI - SAT 0
	RETURN BACK Back / Return
	GOTO SHIFT + GOTO TEXT Shift + Text /
	Red/[<>] NETFLIX SEARCH Red / Netflix / Search
	Green/Angle APP REPEAT Green / APP / Repeat
	Yellow/Prog YouTube REPEAT A-B Yellow / YouTube / Repeat
	Blue/Repeat Prime Video RANDOM Blue / Prime Video / Random

Original	Replacement

