





























 

 

 



 





 







 



 















Original		Replacement		Original		Replacement	
	Open/Close		Eject / Surround		7		7
	Standby Tv		Shift + Power		9 Tv		Shift + 9
	Standby		Power		8		8
	1 Tv		Shift + 1		9		9
	2 Tv		Shift + 2		0 Tv		Shift + 0
	2		2		0		0
	3 Tv		Shift + 3		-/-- Tv		Guide / EPG / -/--
	1		1		10		Shift + Guide / EPG / -/--
	4 Tv		Shift + 4		+10		Fav / Marker / PC
	3		3		Return		Back / Return
	4		4		Page		Setup / OPT /
	5 Tv		Shift + 5		Title/Group		Info / Angle
	5		5		Tv/Video		Shift + TV/Radio / Program
	6 Tv		Shift + 6		Cancel		Exit / Cancel / Clear
	7 Tv		Shift + 7		Top Menu		D.Menu / Top
	6		6		Choice		TV/Radio /
	8 Tv		Shift + 8		Menu		Menu / Home





Original	Replacement
CH+ Tv	Shift + CH+ /
Up	Up
CH- Tv	Shift + CH- /
Vol- Tv	Shift + Vol-
Down	Down
Vol+ Tv	Shift + Vol+
Right	Right
Enter	OK
Left	Left
I<</Previous	I<< / Preset-
On Screen	Display / Media
>>I/Next	>>I / Preset+
Stop/Clear	Stop / Hold
Play/Select	Play / Slow
Pause/Strobe	Pause / Step / Freeze
<</Slow-	<< / Tune-
>>/Slow+	>> / Tune+

Original	Replacement
Repeat	Green / APP / Repeat
Subtitle	Subtitle / EQ
Audio/fs/Rate	Audio / Lang I/II
VFP/Progressive Scan	Picture / Format
Digest	AV / Input / RDS
Angle	Shift + Info / Angle
Zoom-	CH- / Page-
Zoom+	CH+ / Page+
3D Phonic	Zoom / Size
PAL/NTSC	Sleep / Timer
Amp Vol-	Vol-
Amp Vol+	Vol+
Muting Tv	Mute / Dimmer

