

























 



 







Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Shift + Smart / List
 Recall	 Back / Return
 FAV	 Fav / Marker / PC
 Subtitle	 Subtitle / EQ
 Info	 Info / Angle
 TTX	 Text / Goto

Original	Replacement
 Vol+	 Vol+
 Vol-	 Vol-
 Page+	 Shift + CH+ /
 Page-	 Shift + CH- /
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Lang	 Audio / Lang I/II
 Timeshift	 Smart / List
 Tv/Radio	 TV/Radio /
 EPG	 Guide / EPG / -/-
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear





Original	Replacement	Original	Replacement
	Red 		Red / Netflix / Search
	Green 		Green / APP / Repeat
	Yellow 		Yellow / YouTube / Repeat
	Blue 		Blue / Prime Video / Random
	Play 		Play / Slow
	Pause 		Pause / Step / Freeze
	>> 		>> / Preset+
	Rec 		Rec / Rec Mode
	<< 		<< / Tune-
	>> 		>> / Tune+
	<< 		<< / Preset-
	Stop 		Stop / Hold
	Timer 		Sleep / Timer
	PVR 		AV / Input / RDS
	V-Format 		Shift + 4
	Aspect 		Picture / Format

