













 














































 

 





Original	Replacement
 Eject	 Eject / Surround
 PBC	 Picture / Format
 A-B	 Yellow / YouTube / Repeat
 Repeat	 Green / APP / Repeat
 N/P	 Info / Angle
 Angle	 Shift + Info / Angle
 Subtitle	 Subtitle / EQ
 OSD	 Display / Media
 Pscan	 Shift + Display / Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 0	 0
 Search	 Red / Netflix / Search
 +10	 Guide / EPG / -/--
 Prog	 TV/Radio /
 Clear	 Exit / Cancel / Clear
 Vol+	 Vol+
 Vol-	 Vol-
 Setup	 Setup / OPT /
 Title/return	 Back / Return
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Enter	 OK
 Audio	 Audio / Lang I/II
 Mute	 Mute / Dimmer





	Original	Replacement	Original	Replacement
	Zoom	Zoom / Size		
	Slow	Shift + Play /		
	Step	Shift + Pause / Step /		
	Pause	Pause / Step / Freeze		
	Play	Play / Slow		
	Stop	Stop / Hold		
	<<	<< / Tune-		
	>>	>> / Tune+		
	<<	<< / Preset-		
	>>	>>  / Preset+		

