



| Original | | Replacement | | Original | | Replacement | |
|----------|-------------|-------------|----------------------|----------|---------|-------------|------------------------|
| | Standby | | Power | | Freeze | | Freeze / Timer |
| | Computer | | Comp / Video | | P-Timer | | Shift + Freeze / Timer |
| | Video | | Shift + Comp / Video | | No Show | | Mode |
| | Menu | | Menu | | Mute | | Blank / Mute |
| | Keystone | | Shift + Up | | | | |
| | Up | | Up | | | | |
| | Down | | Down | | | | |
| | Vol- | | Vol - / Page - | | | | |
| | Left | | Left | | | | |
| | Vol+ | | Vol + / Page + | | | | |
| | Right | | Right | | | | |
| | Select | | Enter | | | | |
| | Lampcontrol | | Shift + Power | | | | |
| | C.Zoom Up | | + / Play | | | | |
| | C.Zoom Down | | - / Stop | | | | |
| | Auto PC | | Auto | | | | |
| | Image | | Eco / Aspect | | | | |

