














 




 





 







Original	Replacement
	 Power
	 Smart / List
	 Text / Goto
	 Mute / Dimmer
	 Vol+
	 Vol-
	 Info / Angle
	 Guide / EPG / -/-
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Menu / Home
	 Exit / Cancel / Clear
	 AV / Input / RDS
	 TV/Radio /
	 Up
	 CH+ / Page+

Original	Replacement
	 Down
	 CH- / Page-
	 Left
	 Right
	 OK
	 Back / Return
	 Zoom / Size
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0



