




Original		Replacement		Original		Replacement	
	Power		Power		Input		AV / Input / RDS
	Mute		Mute / Dimmer		Info		Info / Angle
	1		1		Menu		Menu / Home
	2		2		Exit		Exit / Cancel / Clear
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		OK		OK
	8		8		Vol+		Vol+
	9		9		Vol-		Vol-
	0		0		FAV		Fav / Marker / PC
	-/=/		Shift + Guide / EPG / -/=/		P.Mode		Picture / Format
	Recall		Back / Return		S.Mode		Sound / Title
	Sleep		Sleep / Timer		CH+		CH+ / Page+
	Audio		Audio / Lang I/II		CH-		CH- / Page-
	Aspect		Shift + Picture / Format		Red		Red / Netflix / Search





Original	Replacement	Original	Replacement
	Green Green / APP / Repeat		Index D.Menu / Top
	Yellow Yellow / YouTube / Repeat		Tv/Radio TV/Radio /
	Blue Blue / Prime Video / Random		Mix Smart / List
	Home Shift + Home / Menu /		Sub-T Subtitle / EQ
	Setup Setup / OPT /		
	Mouse Display / Media		
	Browser Guide / EPG / -/--		
	Text Text / Goto		
	Stop Stop / Hold		
	Play Play / Slow		
	Pause Pause / Step / Freeze		
	<</Hold << / Tune-		
	>>/Subpage >> / Tune+		
	I<< I<< / Preset-		
	>>I/Cancel >>I / Preset+		
	Reveal Rec / Rec Mode		
	Size Zoom / Size		

