 











 



 











 

















 













 











Original	Replacement	Original	Replacement
 Show View	 Info / Angle	 Power VCR	 Power
 Up	 Up	 Pause/Slow	 Pause / Step / Freeze
 Down	 Down	 Rec/OTR	 Rec / Rec Mode
 Check	 Fav / Marker / PC	 1	 1
 Cancel	 Shift + Exit / Cancel / Clear	 2	 2
 PDC/VPS	 Picture / Format	 3	 3
 SP/LP	 Setup / OPT /	 4	 4
 Timer Rec	 Sleep / Timer	 5	 5
 Menu	 Menu / Home	 6	 6
 Exit	 Exit / Cancel / Clear	 Transmit	 Smart / List
 Store	 Back / Return	 7	 7
 <<	 << / Tune-	 8	 8
 Left	 Left	 9	 9
 Play	 Play / Slow	 Tracking/V-Lock	 CH+ / Page+
 >>	 >> / Tune+	 Input Select	 AV / Input / RDS
 Right	 Right	 0/SAT	 0
 Stop	 Stop / Hold	 -/--	 Guide / EPG / -/--



 



 









 





























Original		Replacement		Original		Replacement	
	Tracking/V-Lock Down		CH- / Page-				
	Power TV		Shift + Power				
	OSD		Display / Media				
	Direct Tv Rec		TV/Radio /				
	Tv Vol+		Vol+				
	AV		Shift + AV / Input / RDS				
	I<< Index		I<< / Preset-				
	Index >>I		>>I / Preset+				
	Tv Vol-		Vol-				





Original		Replacement		Original		Replacement	
	Power TV		Power		I<< Index		I<< / Preset-
	1		1		Index >>I		>>I / Preset+
	2		2		Up		CH+ / Page+
	3		3		Down		CH- / Page-
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	-/--		Guide / EPG / -/--				
	Vol+		Vol+				
	Vol-		Vol-				
	AV		AV / Input / RDS				
	Direct Tv Rec		Rec / Rec Mode				
	OSD		Display / Media				

