



| Original | | Replacement | | Original | | Replacement | |
|---|-----------|---|------------------|---|-------------|---|------------------------|
|  | Power |  | Power |  | Vol+ |  | Vol+ |
|  | Mute |  | Mute / Dimmer |  | Vol- |  | Vol- |
|  | 1 |  | 1 |  | Menu |  | Menu / Home |
|  | 2 |  | 2 |  | Recall |  | Back / Return |
|  | 3 |  | 3 |  | P+ |  | Shift + CH+ / |
|  | 4 |  | 4 |  | P- |  | Shift + CH- / |
|  | 5 |  | 5 |  | Text |  | Text / Goto |
|  | 6 |  | 6 |  | Exit |  | Exit / Cancel / Clear |
|  | 7 |  | 7 |  | Fav |  | Fav / Marker / PC |
|  | 8 |  | 8 |  | EPG |  | Guide / EPG / -/- |
|  | 9 |  | 9 |  | Up |  | Up |
|  | 0 / Sleep |  | 0 |  | Left |  | Left |
|  | 0 / Sleep |  | Sleep / Timer |  | OK |  | OK |
|  | TV/Rad |  | TV/Radio / |  | Right |  | Right |
|  | TV / SAT |  | AV / Input / RDS |  | Down |  | Down |
|  | CH+ |  | CH+ / Page+ |  | Red / V-FMT |  | Red / Netflix / Search |
|  | CH- |  | CH- / Page- |  | Red / V-FMT |  | Picture / Format |



