





































Original	Replacement
	
Power	Power
	
Mute	Mute / Dimmer
	
Play	Play / Slow
	
Pause	Pause / Step / Freeze
	
Stop	Stop / Hold
	
<</ <<	<< / Tune-
	
>>/>>	>> / Tune+
	
AD/Subt.	Audio / Lang I/II
	
TTX/MIX	Text / Goto
	
Samsung TV	TV/Radio /
	
Settings	Setup / OPT /
	
Source	AV / Input / RDS
	
Home	Menu / Home
	
Up	Up
	
Info	Info / Angle
	
Left	Left
	
Enter	OK

Original	Replacement
	
Right	Right
	
Exit	Exit / Cancel / Clear
	
PRE-CH	Fav / Marker / PC
	
Down	Down
	
Vol+	Vol+
	
CH List	Smart / List
	
Ch+	CH+ / Page+
	
Vol-	Vol-
	
Ch-	CH- / Page-
	
1	1
	
2	2
	
3	3
	
4	4
	
5	5
	
6	6
	
7	7
	
8	8





Original	Replacement	Original	Replacement
	9		9
	Guide		Guide / EPG / -/--
	0		0
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Return		Back / Return
	Netflix		Shift + Red / Netflix /
	video prime		Shift + Blue / Prime

Original	Replacement

