





Original		Replacement		Original		Replacement	
	Power		Power		Red		Red / Netflix / Search
	<<		<< / Tune-		Vol+		Vol+
	Play/Archiv		Play / Slow		P+		CH+ / Page+
	>>		>> / Tune+		Green		Green / APP / Repeat
	Rec		Rec / Rec Mode		Up		Up
	Pause/Timeshift		Pause / Step / Freeze		Yellow		Yellow / YouTube / Repeat
	Stop		Stop / Hold		Left		Left
	1		1		OK		OK
	2		2		Right		Right
	3		3		Blue		Blue / Prime Video / Random
	4		4		Down		Down
	5		5		White/F		Info / Angle
	6		6		Vol-		Vol-
	7		7		P-		CH- / Page-
	8		8		Mute		Mute / Dimmer
	9		9		Back		Back / Return
	0/Input		0		Exit		Exit / Cancel / Clear





Original		Replacement		Original	Replacement
	Text		Text / Goto		
	EPG		Guide / EPG / -/--		
	Home		Menu / Home		

