


 





Original		Replacement		Original		Replacement	
	Power		Power		Music		2
	Standby		Shift + Power		Entertain		3
	CD		Shift + 3		Movie		4
	MD/CD-R		Shift + 5		Standard		5
	DVD		Shift + 2		Select		6
	DTV/CBL		Shift + 1		Exto Sur.		7
	Tuner		Shift + 6		Pure Direct		8
	Multi CH In		Shift + 8		Speakers		9
	V-AUX		Shift + 7		Enhancer		0
	DVR		Shift + 9		Night		Guide / EPG / -/-
	VCR		Shift + 4		Straight		Fav / Marker / PC
	PHONO		Shift + 0		Level / Title		Sound / Title
	Sleep		Sleep / Timer		Set Menu		Menu / Home
	Volume +		Vol+		Up		Up
	Volume -		Vol-		Left/-		Left
	Mute		Mute / Dimmer		Enter		OK
	Stereo		1		Right/+		Right





Original	Replacement
	 Down
	 Back / Return
	 Display / Media

Original	Replacement





Original		Replacement		Original		Replacement	
	Power		Power		2		2
	Standby		Shift + Power		3		3
	CD		Shift + 3		4		4
	MD/CD-R		Shift + 5		5		5
	DVD		Shift + 2		6		6
	DTV/CBL		Shift + 1		7		7
	Tuner		Shift + 6		8		8
	Multi CH In		Shift + 8		9		9
	V-AUX		Shift + 7		0		0
	DVR		Shift + 9		ENT		Fav / Marker / PC
	VCR		Shift + 4		Title/Level		Sound / Title
	PHONO		Shift + 0		Up / Preset+		Up
	Sleep		Sleep / Timer		Up / Preset+		>> / Preset+
	Volume +		Vol+		Menu/Set Menu		Menu / Home
	Volume -		Vol-		Left / A/B/C/D/E-		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right /		Right



A/B/C/D/E+



Original	Replacement	Original	Replacement
	Return		Back / Return
	Down / Preset-		Down
	Down / Preset-		I<< / Preset-
	Display		Display / Media
	Freq/Text		Red / Netflix / Search
	PTY Seek Mode		Yellow / YouTube / Repeat
	PTY Seek Start		Blue / Prime Video / Random
	EON		Green / APP / Repeat

Original	Replacement	Original	Replacement

