













 



 



 



 

 









Original	Replacement
 Main Power On	 Power
 Main Power Off	 Shift + Power
 Speakers 1	 Red / Netflix / Search
 Speakers 2	 Green / APP / Repeat
 Phono	 Shift + 1
 Tape Mon	 Shift + 4
 Tape 2	 Shift + 5
 CD	 Shift + 3
 AUX	 Shift + 7
 AM	 Shift + 8
 FM	 Shift + 9
 I<</DWN-Prese	 I<< / Preset-
 >>I/Preset Up	 >>I / Preset+
 <</DWN	 << / Tune-
 >>/Tuning Up	 >> / Tune+
 Rec/Pause	 Rec / Rec Mode
 FM Mode	 Smart / List

Original	Replacement
 Disp RDS	 Info / Angle
 RDS PTY	 Display / Media
 P. Scan	 Back / Return
 Mute	 Mute / Dimmer
 Sleep	 Sleep / Timer
 Master Vol+	 Vol+
 Dimmer	 Shift + Mute / Dimmer
 Master Vol-	 Vol-
 Direct	 Setup / OPT /
 Memory	 OK
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 Auto Preset	 TV/Radio /





 













 







Original		Replacement		Original		Replacement	
	7		7				
	8		8				
	9		9				
	Clear		Exit / Cancel / Clear				
	0		0				





Original	Replacement
 Main Power On	 Power
 Main Power Off	 Shift + Power
 CD	 Shift + 3
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Rec/Pause	 Rec / Rec Mode
 Stop	 Stop / Hold
 Play	 Play / Slow
 Disc Skip Up	 CH+ / Page+
 Disc Skip Down	 CH- / Page-
 P.Scan	 Zoom / Size
 Mute	 Mute / Dimmer
 Master Vol+	 Vol+
 Master Vol-	 Vol-
 Memory	 OK

Original	Replacement
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Clear	 Exit / Cancel / Clear
 0	 0






















Original		Replacement		Original	Replacement
	Main Power On		Power		
	Main Power Off		Shift + Power		
	Tape Mon		4		
	I<</DWN-Prese		I<< / Preset-		
	>>I/Prese Up		>>I / Preset+		
	<</DWN		<< / Tune-		
	>>/Tuning Up		>> / Tune+		
	Rec/Pause		Rec / Rec Mode		
	Stop		Stop / Hold		
	<		Left		
	>		Right		
	Disc Skip Up		CH+ / Page+		
	Disc Skip Down		CH- / Page-		
	P.Scan		Back / Return		
	Mute		Mute / Dimmer		
	Master Vol+		Vol+		
	Master Vol-		Vol-		





Original	Replacement	Original	Replacement
Main Power On	 Power		
Mute	 Mute / Dimmer		
Stop	 Stop / Hold		
Rec/Pause	 Rec / Rec Mode		
<</DWN	 << / Tune-		
>>/Tuning Up	 >> / Tune+		
I<</DWN-Prese	 I<< / Preset-		
>>I/Preset Up	 >>I / Preset+		
Auto Preset	 TV/Radio /		
Direct	 Setup / OPT /		
Tuning Up	 Up		
<	 Left		
Memory	 OK		
>	 Right		
Clear	 Exit / Cancel / Clear		
Tuning Down	 Down		
P.Scan	 Back / Return		

Original	Replacement	Original	Replacement
Master Vol+	 Vol+		
FM Mode	 Smart / List		
Disc Skip Up	 CH+ / Page+		
Master Vol-	 Vol-		
Disc Skip Down	 CH- / Page-		
1	 1		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
0	 0		
Main Power Off	 Shift + Power		
Tape 2	 Shift + 5		

