

 





























 











 

 


Original	Replacement
	 Power
	 Mute / Dimmer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Smart / List
	 0
	 Guide / EPG / -/-
	 Menu / Home
	 AV / Input / RDS
	 Up

Original	Replacement
	 Left
	 OK
	 Right
	 Back / Return
	 Down
	 Exit / Cancel / Clear
	 Vol+
	 Info / Angle
	 CH+ / Page+
	 Vol-
	 Setup / OPT /
	 CH- / Page-
	 TV/Radio /
	 Audio / Lang I/II
	 Text / Goto
	 Subtitle / EQ
	 Shift + Smart / List





Original	Replacement	Original	Replacement
	Rec / Rec Mode		
	Stop / Hold		
	Fav / Marker / PC		
	<< / Tune-		
	Play / Slow		
	Pause / Step / Freeze		
	>> / Tune+		
	Red / Netflix / Search		
	Green / APP / Repeat		
	Yellow / YouTube / Repeat		
	Blue / Prime Video / Random		

