




















Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 Nicam	 Shift + Audio / Lang I/II
 4	 4
 5	 5
 6	 6
 Recall/Goto	 Back / Return
 Recall/Goto	 Shift + Text /
 7	 7
 8	 8
 9	 9
 0	 0
 TV Menu	 Menu / Home
 Up	 Up

Original	Replacement
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Display	 Display / Media
 Vol+	 Vol+
 Sound	 Sound / Title
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Pic	 Picture / Format
 CH-	 CH- / Page-
 Sleep	 Sleep / Timer
 Aspect	 Shift + Picture / Format
 DVD/DVB Setup	 Setup / OPT /
 DVD Source	 Shift + AV / Input / RDS



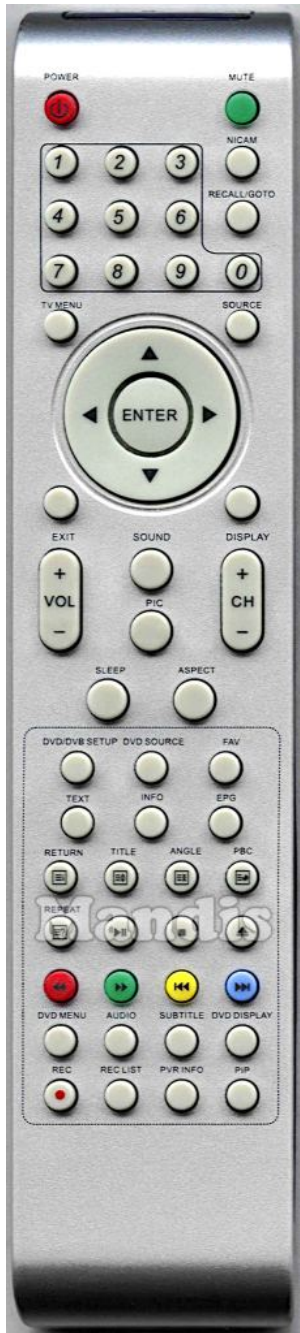

Original	Replacement
	Fav / Marker / PC 
	Text / Goto 
	Info / Angle 
	Guide / EPG / -/-- 
	Shift + Back / Return 
	Shift + Sound / Title 
	Zoom / Size 
	Shift + Stop / 
	TV/Radio / 
	Shift + Green / APP / 
	Play / Slow 
	Stop / Hold 
	Eject / Surround 
	<< / Tune- 
	Red / Netflix / Search 
	>> / Tune+ 
	Green / APP / Repeat 

Original	Replacement
	I<<< / Preset- 
	Yellow / YouTube / Repeat 
	>>>I / Preset+ 
	Blue / Prime Video / Random 
	D.Menu / Top 
	Audio / Lang I/II 
	Subtitle / EQ 
	Shift + Display / Media 
	Rec / Rec Mode 
	Smart / List 
	Shift + Info / Angle 
	Shift + Smart / List 

