











 











Original	Replacement
 Power	 Power
 Mute/On	 Mute / Dimmer
 A	 Shift + Red / Netflix /
 B	 Shift + Green / APP /
 C	 Shift + Yellow / YouTube /
 D	 Shift + Blue / Prime
 Game	 Display / Media
 AUX	 Shift + 7
 AUX	 Smart / List
 [i]	 Info / Angle
 TXT	 Text / Goto
 Tv/R	 TV/Radio /
 Menu	 Menu / Home
 Guide	 Guide / EPG / -/-
 Pause	 Pause / Step / Freeze
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat

Original	Replacement
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Up	 Up
 CH+	 CH+ / Page+
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Esc	 Exit / Cancel / Clear
 Down	 Down
 CH-	 CH- / Page-
 Sound/[v]	 Audio / Lang I/II
 <<	 << / Tune-
 >>	 >> / Tune+
 1	 1
 2	 2





	Original	Replacement		Original	Replacement
3	3	CD - STB <b>3</b>	3		
4	4	VIDEO <b>4</b>	4		
5	5	TAPE <b>5</b>	5		
6	6	TUNER <b>6</b>	6		
7	7	AUX - HDD <b>7</b>	7		
8	8	USB <b>8</b>	8		
9	9	BLUETOOTH <b>9</b>	9		
↶	Recall	RETURN <b>BACK</b>	Back / Return		
0	0	HDMI - BAT <b>0</b>	0		
SLEEP	Sleep	TIMER <b>SLEEP</b>	Sleep / Timer		

	Original	Replacement		Original	Replacement

