



Original	Replacement	Original	Replacement
 Power	 Power	 Up/CH+	 Up
 Mute	 Mute / Dimmer	 Left	 Left
 Red/EPG	 Red / Netflix / Search	 Vol-	 Vol-
 Red/EPG	 Guide / EPG / -/--	 OK	 OK
 Tv/Radio	 TV/Radio /	 Right	 Right
 Pause	 Pause / Step / Freeze	 Vol+	 Vol+
 Green/Audio	 Green / APP / Repeat	 Down/CH-	 Down
 Green/Audio	 Audio / Lang I/II	 Menu	 Menu / Home
 Info	 Info / Angle	 Exit	 Exit / Cancel / Clear
 Recall	 Back / Return	 A-Z	 Setup / OPT /
 Yellow/Pg	 Yellow / YouTube / Repeat	 SAT	 Shift + 0
 Yellow/Pg	 Sleep / Timer	 FAV	 Fav / Marker / PC
 Yellow/Pg	 Shift + CH+ /	 1	 1
 TXT	 Text / Goto	 2	 2
 Blue/PgDw/Forma	 Blue / Prime Video / Random	 3	 3
 Blue/PgDw/Forma	 Shift + CH- /	 4	 4
 Blue/PgDw/Forma	 Picture / Format	 5	 5





Original	Replacement	Original	Replacement
[6]	6	[TUNER 6]	6
[7]	7	[AUX - HDD 7]	7
[8]	8	[USB 8]	8
[9]	9	[BLUETOOTH 9]	9
[FAV+]	FAV+	[+ CH PAGE]	CH+ / Page+
[0]	0	[HDMI - BAT 0]	0
[FAV-]	FAV-	[CH PAGE -]	CH- / Page-

