



Original	Replacement	Original	Replacement
Power	Power	Stop	Stop / Hold
Mute	Mute / Dimmer	Home	Menu / Home
Setup	Setup / OPT /	Up	Up
FAV/RPT	Fav / Marker / PC	X	Exit / Cancel / Clear
Sub-T	Subtitle / EQ	Left	Left
Audio	Audio / Lang I/II	Enter	OK
DTV	Smart / List	Right	Right
Tv/Radio	TV/Radio /	<< / Tune-	<< / Tune-
EPG	Guide / EPG / -/--	Down	Down
Info	Info / Angle	>>	>>  / Preset+
Edit	Display / Media	>>	>> / Tune+
Copy	Zoom / Size	<<	<< / Preset-
TTX/DVD	Text / Goto	1	1
Vol-	Vol-	2	2
Vol+	Vol+	3	3
Play	Play / Slow	Rec	Rec / Rec Mode
Pause	Pause / Step / Freeze	4	4



