



Original	Replacement
	Mute / Dimmer
	Power
	Display / Media
	AV / Input / RDS
	Shift + Pause / Step /
	Exit / Cancel / Clear
	Guide / EPG / -/--
	Text / Goto
	Subtitle / EQ
	Picture / Format
	Setup / OPT /
	Up
	Audio / Lang I/II
	Left
	OK
	Right
	Menu / Home

Original	Replacement
	Down
	Info / Angle
	CH- / Page-
	CH+ / Page+
	Vol-
	Vol+
	Red / Netflix / Search
	Shift + CH+ /
	Smart / List
	Green / APP / Repeat
	Shift + CH- /
	Sound / Title
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	1
	2
	3





Original	Replacement	Original	Replacement
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 Fav.	 Fav / Marker / PC		
 0	 0		
 P<P	 Back / Return		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Timers	 Sleep / Timer		
 Lib.	 D.Menu / Top		
 Play	 Play / Slow		
 Stop	 Stop / Hold		
 Pause	 Pause / Step / Freeze		
 Rec	 Rec / Rec Mode		

