

 










Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 Media	 Display / Media
 AV	 AV / Input / RDS
 Freeze	 Shift + Pause / Step /
 Exit	 Exit / Cancel / Clear
 Guide	 Guide / EPG / -/--
 Text	 Text / Goto
 Subt.	 Subtitle / EQ
 Format	 Picture / Format
 Mode	 Setup / OPT /
 Up	 Up
 Lang.	 Audio / Lang I/II
 Left	 Left
 OK	 OK
 Right	 Right
 Menu / Back	 Menu / Home

Original	Replacement
 Down	 Down
 Info	 Info / Angle
 PR-	 CH- / Page-
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Vol+	 Vol+
 Red / List / Page+	 Red / Netflix / Search
 Red / List / Page+	 Shift + CH+ /
 Red / List / Page+	 Smart / List
 Green / Page-	 Green / APP / Repeat
 Green / Page-	 Shift + CH- /
 Yellow / Sound	 Sound / Title
 Yellow / Sound	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3





	Original	Replacement	Original	Replacement
	4	 4		
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	Fav.	 Fav / Marker / PC		
	0	 0		
	P<P	 Back / Return		
	<<	 << / Tune-		
	>>	 >> / Tune+		
	Timers	 Sleep / Timer		
	Lib.	 D.Menu / Top		
	Play	 Play / Slow		
	Stop	 Stop / Hold		
	Pause	 Pause / Step / Freeze		
	Rec	 Rec / Rec Mode		

