 

 









 

 

 

 









 

 

 



 

 



 

 
 
 




 




 

 



 
 
 





Original		Replacement		Original		Replacement	
	Power		Power		3		3
	Eject		Eject / Surround		4		4
	Up		Up		5		5
	Right		Right		6		6
	Clear		Exit / Cancel / Clear		7		7
	Left		Left		8		8
	Down		Down		9		9
	OK / Clk/Cnt		OK		TV/VCR		Smart / List
	i		Info / Angle		0		0
	Pause/Still		Pause / Step / Freeze		CM Skip		Fav / Marker / PC
	FF		>> / Tune+		ShowView / Video Plus+		Display / Media
	REW		<< / Tune-		LP		Menu / Home
	Play		Play / Slow		AV		AV / Input / RDS
	Stop		Stop / Hold		C.Lock		D.Menu / Top
	Rec ITR		Rec / Rec Mode		ez POWER OFF		Red / Netflix / Search
	1		1		ez REPEAT		Green / APP / Repeat
	2		2				

