



Original	Replacement
	Power
	Mute / Dimmer
	TV/Radio /
	Subtitle / EQ
	Text / Goto
	Display / Media
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Back / Return
	0

Original	Replacement
	AV / Input / RDS
	Vol+
	Menu / Home
	Exit / Cancel / Clear
	CH+ / Page+
	Vol-
	Up
	CH- / Page-
	Left
	OK
	Right
	Down
	D.Menu / Top
	Guide / EPG / -/-
	Smart / List
	Fav / Marker / PC
	Setup / OPT /





Original	Replacement
 i	 Info / Angle
 Red / Stop	 Red / Netflix / Search
 Red / Stop	 Stop / Hold
 Green /	 Green / APP / Repeat
 Green /	 Pause / Step / Freeze
 Green /	 Play / Slow
 Yellow / <<<	 <<< / Tune-
 Yellow / <<<	 Yellow / YouTube / Repeat
 Blue / >>>	 >>> / Tune+
 Blue / >>>	 Blue / Prime Video / Random
 APP	 Shift + Green / APP /
 Format	 Picture / Format
 Timer	 Sleep / Timer
 Audio ?	 Audio / Lang I/II

Original	Replacement

