



Original	Replacement	Original	Replacement
TV/RAD	TV/Radio /	Vol+	Vol+
Power	Power	Mute	Mute / Dimmer
Input	AV / Input / RDS	P+/Page Up	CH+ / Page+
AV Mode	Picture / Format	Vol-	Vol-
Power Saving	Eject / Surround	P-/Page Down	CH- / Page-
1	1	Up	Up
2	2	Left	Left
3	3	OK	OK
4	4	Right	Right
5	5	Menu	Menu / Home
6	6	Down	Down
7	7	Return / Exit	Back / Return
8	8	Red	Red / Netflix / Search
9	9	Green	Green / APP / Repeat
List	Smart / List	Yellow	Yellow / YouTube / Repeat
0	0	Blue	Blue / Prime Video / Random
Q.View	Display / Media	Text/[≡]	Text / Goto

Original	Replacement	Original	Replacement
TV/RAD	TV/Radio /	Vol+	Vol+
Power	Power	Mute	Mute / Dimmer
Input	AV / Input / RDS	P+/Page Up	CH+ / Page+
AV Mode	Picture / Format	Vol-	Vol-
Power Saving	Eject / Surround	P-/Page Down	CH- / Page-
1	1	Up	Up
2	2	Left	Left
3	3	OK	OK
4	4	Right	Right
5	5	Menu	Menu / Home
6	6	Down	Down
7	7	Return / Exit	Back / Return
8	8	Red	Red / Netflix / Search
9	9	Green	Green / APP / Repeat
List	Smart / List	Yellow	Yellow / YouTube / Repeat
0	0	Blue	Blue / Prime Video / Random
Q.View	Display / Media	Text/[≡]	Text / Goto





Original	Replacement
T.OPT	Setup / OPT /
Subtitle	Subtitle / EQ
FAV	Fav / Marker / PC
Q.Menu	D.Menu / Top
Info	Info / Angle
Guide	Guide / EPG / -/--

Original	Replacement

