










 

 



 





 











 



Original	Replacement	Original	Replacement
 On	 Power	 Up	 Up
 Standby	 Shift + Power	 Vol +	 Vol+
 Input Sel. V1	 1	 CH - / Disc -	 CH- / Page-
 Input Sel. V2	 4	 Left	 Left
 Input Sel. V3	 7	 Enter	 OK
 Input Sel. DVD	 2	 Right	 Right
 Input Sel. Multi	 8	 Vol -	 Vol-
 Input Sel. CD	 3	 Down	 Down
 Input Sel. Tape	 5	 Display	 Display / Media
 Input Sel. Tuner	 6	 Return / Exit	 Exit / Cancel / Clear
 Tone	 Play / Slow	 Return / Exit	 Back / Return
 Tone-	 << / Tune-	 Setup	 Setup / OPT /
 Tone+	 >> / Tune+	 Muting	 Mute / Dimmer
 Dimmer	 Shift + Mute / Dimmer	 SURRE	 Eject / Surround
 Menu	 Menu / Home	 All ST	 Subtitle / EQ
 Sleep	 Sleep / Timer	 Stereo	 Audio / Lang I/II
 CH + / Disc +	 CH+ / Page+	 Pure A	 Picture / Format



 



 

 

 



 

 

 
 
 

 

 

 

 



 





Original	Replacement
 On	 Power
 Standby	 Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10 / -- / ---	 Guide / EPG / - / -
 0	 0
 Clear	 Exit / Cancel / Clear
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Up	 Up

Original	Replacement
 Vol+	 Vol+
 Left	 Left
 Enter	 OK
 Right	 Right
 Vol-	 Vol-
 Down	 Down
 Display	 Display / Media
 Return	 Back / Return
 Setup	 Setup / OPT /
 Muting	 Mute / Dimmer
 I<<	 I<< / Preset-
 Play	 Play / Slow
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 >>	 >> / Tune+





Original	Replacement
 On	 Power
 Standby	 Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10 / --/--	 Guide / EPG / --/--
 0	 0
 Vol+	 Vol+
 Vol-	 Vol-
 Muting	 Mute / Dimmer
 I<<	 I<< / Preset-

Original	Replacement
 Play	 Play / Slow
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Random	 Blue / Prime Video / Random
 Repeat	 Green / APP / Repeat
 Open / Close	 Eject / Surround

