
 
 






 
 
 

 






 



 








 




Original	Replacement	Original	Replacement
	Subtitle / EQ		Green / APP / Repeat
	Picture / Format		Yellow / YouTube / Repeat
	Sleep / Timer		CH- / Page-
	Up		Blue / Prime Video / Random
	Down		I<< / Preset-
	Red / Netflix / Search		>>I / Preset+
	Right		Pause / Step / Freeze
	Left		Stop / Hold
	CH+ / Page+		Rec / Rec Mode
	Vol+		<< / Tune-
	Vol-		Play / Slow
	OK		>> / Tune+
	Back / Return		7
	TV/Radio /		Mute / Dimmer
	Info / Angle		Menu / Home
	Guide / EPG / -/--		Exit / Cancel / Clear
	Fav / Marker / PC		1





	Original	Replacement		Original	Replacement
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	Power		Power		
	8		8		
	9		9		
	0		0		
	List		Smart / List		
	Lang		Audio / Lang I/II		
	TXT		Text / Goto		

