



 





























































 





| Original  |              | Replacement   |                  | Original  |              | Replacement   |                    |
|---|--------------|---|------------------|---|--------------|---|--------------------|
|    | Standby      |    | Power            |    | 10+          |    | Guide / EPG / -/-- |
|    | Open / Close |    | Eject / Surround |    | Audio        |    | Audio / Lang I/II  |
|    | Mute         |    | Mute / Dimmer    |    | Display      |    | Display / Media    |
|    | 1            |    | 1                |    | Return       |    | Back / Return      |
|    | 2            |    | 2                |    | Setup        |    | Setup / OPT /      |
|    | 3            |    | 3                |    | Zoom         |    | Zoom / Size        |
|    | Subtitle     |    | Subtitle / EQ    |    | Up           |    | Up                 |
|    | 4            |    | 4                |    | Left         |    | Left               |
|    | 5            |    | 5                |    | Enter        |    | OK                 |
|    | 6            |    | 6                |    | Right        |    | Right              |
|   | Angle        |   | Info / Angle     |   | Title        |   | Sound / Title      |
|  | 7            |  | 7                |  | Down         |  | Down               |
|  | 8            |  | 8                |  | Menu         |  | Menu / Home        |
|  | 9            |  | 9                |  | N/P          |  | Picture / Format   |
|  | Prog         |  | TV/Radio /       |  | USB          |  | Shift + 8          |
|  | Goto         |  | Text / Goto      |  | <<           |  | << / Tune-         |
|  | 10/0         |  | 0                |  | Play / Pause |  | Play / Slow        |





| Original |              | Replacement |                             | Original |  | Replacement |  |
|----------|--------------|-------------|-----------------------------|----------|--|-------------|--|
|          | Play / Pause |             | Pause / Step / Freeze       |          |  |             |  |
|          | I<<          |             | I<< / Preset-               |          |  |             |  |
|          | >>           |             | >> / Tune+                  |          |  |             |  |
|          | Stop         |             | Stop / Hold                 |          |  |             |  |
|          | >>I          |             | >>I / Preset+               |          |  |             |  |
|          | Repeat       |             | Green / APP / Repeat        |          |  |             |  |
|          | A-B          |             | Yellow / YouTube / Repeat   |          |  |             |  |
|          | Resume       |             | Rec / Rec Mode              |          |  |             |  |
|          | L/R          |             | D.Menu / Top                |          |  |             |  |
|          | Step         |             | Shift + Pause / Step /      |          |  |             |  |
|          | Video Out    |             | AV / Input / RDS            |          |  |             |  |
|          | Clear        |             | Exit / Cancel / Clear       |          |  |             |  |
|          | Vol+         |             | Vol+                        |          |  |             |  |
|          | Slow         |             | Shift + Play /              |          |  |             |  |
|          | Shuffle      |             | Blue / Prime Video / Random |          |  |             |  |
|          | PBC          |             | Smart / List                |          |  |             |  |
|          | Vol-         |             | Vol-                        |          |  |             |  |

