



Original		Replacement		Original		Replacement	
	Power		Power		Sleep		Sleep / Timer
	CBL/SAT		Shift + 0		Volume+		Vol+
	DVD		Shift + 2		CH/Page-		CH- / Page-
	Tv Audio		Shift + 1		Mute		Mute / Dimmer
	Blu-ray		Shift + 4		Eco		D.Menu / Top
	AUX1		Shift + 5		Volume-		Vol-
	Tuner		Shift + 6		Info		Info / Angle
	Bluetooth		Shift + 9		Up		Up
	AUX2		Shift + 7		Option		Shift + Setup / OPT / Tools
	Game		Shift + Guide / EPG / -/--		Left		Left
	Phono		Guide / EPG / -/--		Enter		OK
	USB		Shift + 8		Right		Right
	Media Player		Display / Media		Back		Back / Return
	CD		Shift + 3		Down		Down
	Heos		Shift + Fav / Marker / PC		Setup		Setup / OPT /
	Internet Radio		Smart / List		Home		Menu / Home
	CH/Page+		CH+ / Page+		Stop		Stop / Hold





Original		Replacement		Original		Replacement	
	Power		Power		Sleep		Sleep / Timer
	CBL/SAT		Shift + 0		Volume+		Vol+
	DVD		Shift + 2		CH/Page-		CH- / Page-
	Tv Audio		Shift + 1		Mute		Mute / Dimmer
	Blu-ray		Shift + 4		Volume-		Vol-
	AUX1		Shift + 5		Up		Up
	Tuner		Shift + 6		Left		Left
	Bluetooth		Shift + 9		Enter		OK
	Game		Shift + Guide / EPG / -/--		Right		Right
	AUX2		Shift + 7		Back		Back / Return
	Phono		Guide / EPG / -/--		Down		Down
	USB		Shift + 8		Home		Menu / Home
	Media Player		Display / Media		Stop		Stop / Hold
	CD		Shift + 3		Pause		Pause / Step / Freeze
	Internet Radio		Shift + Fav / Marker / PC		Play		Play / Slow
	Internet Radio		Smart / List		I<</Tune-		I<< / Preset-
	CH/Page+		CH+ / Page+		>>I/Tune+		>>I / Preset+





Original	Replacement	Original	Replacement
	<<		<< / Tune-
	>>		>> / Tune+
	Smart Select 1		Sound / Title
	Smart Select 2		Audio / Lang I/II
	Smart Select 3		Subtitle / EQ
	Smart Select 4		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		Fav / Marker / PC


















 

 













Original	Replacement	Original	Replacement
Power	Power	Sleep	Sleep / Timer
CBL/SAT	Shift + 0	Volume+	Vol+
DVD	Shift + 2	CH/Page-	CH- / Page-
Tv Audio	Shift + 1	Mute	Mute / Dimmer
Blu-ray	Shift + 4	Volume-	Vol-
AUX1	Shift + 5	Up	Up
Tuner	Shift + 6	Left	Left
Bluetooth	Shift + 9	Right	Right
Game	Shift + Guide / EPG / -/-	Back	Back / Return
AUX2	Shift + 7	Down	Down
Phono	Guide / EPG / -/-	Home	Menu / Home
USB	Shift + 8	Stop	Stop / Hold
Media Player	Display / Media	Pause	Pause / Step / Freeze
CD	Shift + 3	Play	Play / Slow
Internet Radio	Shift + Fav / Marker / PC	I<</Tune-	I<< / Preset-
CH/Page+	CH + / Page+	>>I/Tune+	>>I / Preset+
		<<	<< / Tune-





Original	Replacement	Original	Replacement
 >>	 >> / Tune+		
 Smart Select 1	 Sound / Title		
 Smart Select 2	 Audio / Lang I/II		
 Smart Select 3	 Subtitle / EQ		
 Smart Select 4	 Eject / Surround		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Enter	 OK		
 Enter	 Fav / Marker / PC		

