
























 












































Original		Replacement		Original		Replacement	
	Power		Power		(≡?)		Play / Slow
	Mute		Mute / Dimmer		Freeze		Pause / Step / Freeze
	1		1		Aspect		Shift + Picture / Format
	2		2		Audio		Audio / Lang I/II
	3		3		Sleep		Sleep / Timer
	4		4		Picture		Picture / Format
	5		5		Source		AV / Input / RDS
	6		6		(≡x)		Rec / Rec Mode
	7		7		Hold		Stop / Hold
	8		8		P+		CH+ / Page+
	9		9		Up		Up
	i		Info / Angle		Left		Left
	0		0		Vol-		Vol-
	R		Back / Return		Menu		Menu / Home
	(≡i)		>> / Tune+		Right		Right
	(♦)		l<< / Preset-		Vol+		Vol+
	(≡o)		<< / Tune-		P-		CH- / Page-



