



Original	Replacement
Input	AV / Input / RDS
Power	Power
Amazon	Blue / Prime Video / Random
Netflix	Red / Netflix / Search
iHeart Radio	Setup / OPT /
<<<	<<< / Tune-
	Pause / Step / Freeze
▶	Play / Slow
>>>	>>> / Tune+
CC	Subtitle / EQ
Rec	Rec / Rec Mode
■	Stop / Hold
MENU	Menu / Home
EXIT	Exit / Cancel / Clear
INFO	Info / Angle
Up	Up
Left	Left

Original	Replacement
OK	OK
Right	Right
Down	Down
BACK	Back / Return
GUIDE	Guide / EPG / -/-
Vol+	Vol+
V	Display / Media
CH+	CH+ / Page+
Vol-	Vol-
CH-	CH- / Page-
Mute	Mute / Dimmer
[]	Zoom / Size
PIC	Picture / Format
Recall	Fav / Marker / PC
1	1
2	2
3	3





Original		Replacement		Original		Replacement	
4	4	VIDEO 4	4				
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
ENTER	Enter	LIST SMART	Smart / List				
0	0	HDMI - BAT 0	0				
---	--	GOTO TEXT	Text / Goto				

