










































 













 















Original	Replacement
	 Power
	 Source
	 TV/Radio
	 Mute / Dimmer
	 PR List
	 Fav / Marker / PC
	 Audio / Lang I/II
	 Info / Angle
	 Red / Netflix / Search
	 Subtitle / EQ
	 Text / Goto
	 Shift + Guide / EPG / -/-
	 Sound / Title
	 Display / Media
	 Zoom / Size
	 Green / APP / Repeat
	 << / Tune-

Original	Replacement
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 Play / Pause
	 Pause / Step / Freeze
	 Up
	 Stop / Exit
	 Stop / Hold
	 Left
	 Enter
	 Right
	 Vol+
	 Down
	 CH+ / Page+
	 Vol-
	 Picture / Format
	 Menu / Home





	Original	Replacement	Original	Replacement
	CH-	 CH- / Page-		
	1	 1		
	2	 2		
	3	 3		
	Lang	 +  Shift + Audio / Lang I/II		
	4	 4		
	5	 5		
	6	 6		
	Sleep	 Sleep / Timer		
	7	 7		
	8	 8		
	9	 9		
	Auto	 D.Menu / Top		
	0	 0		
	10+ / -/--	 Guide / EPG / -/--		
	Recall	 Back / Return		
	Setup / Game	 Setup / OPT /		

