



Original	Replacement
Open/Close	Eject / Surround
V-Mode	Picture / Format
Standby	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
10+	Guide / EPG / -/--
Search	Red / Netflix / Search
OSD	Fav / Marker / PC
Up	Up

Original	Replacement
EQU	Smart / List
Left	Left
Setup	Setup / OPT /
Right	Right
Clear	Exit / Cancel / Clear
Down	Down
Intro	OK
<</F.REV	<< / Tune-
>>/F.FWD	>> / Tune+
I<</Prev	I<< / Preset-
>>I/Next	>>I / Preset+
Pause/Step	Pause / Step / Freeze
Enter/Play	Play / Slow
Stop	Stop / Hold
I< Slow	CH- / Page-
Slow >I	CH+ / Page+
Volume-	Vol-





Original	Replacement	Original	Replacement
 Volume+	 Vol+		
 Prog	 TV/Radio /		
 Subtitle	 Subtitle / EQ		
 Title/PBC	 Sound / Title		
 Menu	 Menu / Home		
 Zoom	 Zoom / Size		
 PAL/NTSC	 D.Menu / Top		
 Repeat	 Green / APP / Repeat		
 A-B RPT	 Yellow / YouTube / Repeat		
 Mute	 Mute / Dimmer		
 DSP	 Display / Media		
 Angle	 Info / Angle		
 Audio	 Audio / Lang I/II		

Original	Replacement	Original	Replacement

