



Original	Replacement
Mute	Mute / Dimmer
Power	Power
Phono	Shift + 7
Tuner	Shift + 6
CD	Shift + 3
CDR/Tape	Shift + 5
TV	Shift + 1
VCR	Shift + 4
SAT	Shift + 0
DVD	Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7

Original	Replacement
8	8
9	9
Nothing	Guide / EPG / -/-
0	0
Menu	Menu / Home
Up	Up
OK	OK
Left	Left
Right	Right
Vol+	Vol+
Down	Down
Play	Play / Slow
Vol-	Vol-
i/News T/A	Info / Angle
Stop	Stop / Hold
I<<	I<< / Preset-
Channel/Track	>>I / Preset+





Original	Replacement	Original	Replacement
Loudness	Smart / List		
Sound	Sound / Title		
Pause/FR./D.	Pause / Step / Freeze		
Night	Sleep / Timer		
3D Surr.	TV/Radio /		
Surr. On/Off	Display / Media		
Sub Woofer+	CH+ / Page+		
Rear+	Shift + CH+ /		
Surr. Mode	Picture / Format		
Sub Woofer-	CH- / Page-		
Rear-	Shift + CH- /		
Test Tone	Zoom / Size		

Original	Replacement	Original	Replacement



 





 

 



 



 

 

 



 

 


 

 

 

 



 





 

 

 



 



Original	Replacement
Mute	Mute / Dimmer
Power	Power
DVD	Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Nothing	Guide / EPG / -/--
0	0
Menu	Menu / Home
Up	Up
OK	OK

Original	Replacement
Left	Left
Right	Right
Vol+	Vol+
Down	Down
Play	Play / Slow
Vol-	Vol-
i/News T/A	Info / Angle
Stop	Stop / Hold
I<<	I<< / Preset-
>>I	>>I / Preset+
Audio	Audio / Lang I/II
Cancel	Exit / Cancel / Clear
Pause	Pause / Step / Freeze
T-C	TV/Radio /
Disc	Blue / Prime Video / Random





	Original	Replacement		Original	Replacement
	 Mute	 Mute / Dimmer		 Vol+	 Vol+
	 Power	 Power		 Down	 Down
	 CD	 Shift + 3		 Play	 Play / Slow
	 1	 1		 Vol-	 Vol-
	 2	 2		 i/News T/A	 Info / Angle
	 3	 3		 Stop	 Stop / Hold
	 4	 4		 I<<	 I<< / Preset-
	 5	 5		 >>I	 >>I / Preset+
	 6	 6		 :>/Cancel	 Exit / Cancel / Clear
	 7	 7		 Pause	 Pause / Step / Freeze
	 8	 8		 Disc	 Blue / Prime Video / Random
	 9	 9			
	 Nothing	 Guide / EPG / -/--			
	 0	 0			
	 Up	 Up			
	 Left	 Left			
	 Right	 Right			

