

 















 




 



 







 


















| Original | | Replacement | | Original | | Replacement | |
|---|---------------|---|------------------|---|-------------|---|-----------------------|
|  | Power |  | Power |  | Vol+ |  | Vol+ |
|  | Energy Saving |  | Sleep / Timer |  | Vol+ |  | Vol+ |
|  | AV Mode |  | Picture / Format |  | P+ |  | CH+ / Page+ |
|  | Input |  | AV / Input / RDS |  | Vol- |  | Vol- |
|  | Tv/Rad |  | TV/Radio / |  | 3D |  | Zoom / Size |
|  | 1 |  | 1 |  | Mute/Delete |  | Mute / Dimmer |
|  | 2 |  | 2 |  | P- |  | CH- / Page- |
|  | 3 |  | 3 |  | Menu |  | Menu / Home |
|  | 4 |  | 4 |  | NetCast |  | Sound / Title |
|  | 5 |  | 5 |  | Q.Menu |  | D.Menu / Top |
|  | 6 |  | 6 |  | Up |  | Up |
|  | 7 |  | 7 |  | Left |  | Left |
|  | 8 |  | 8 |  | OK |  | OK |
|  | 9 |  | 9 |  | Right |  | Right |
|  | List |  | Smart / List |  | Down |  | Down |
|  | 0 |  | 0 |  | Exit |  | Exit / Cancel / Clear |
|  | Q.Vlew |  | Setup / OPT / |  | Back |  | Back / Return |



