




Original	Replacement
Power	Power
Power Tv	+ Shift + Power
DVD	+ Shift + 2
VCR	+ Shift + 4
Eject/Open-Close	Eject / Surround
AV Input Tv	+ Shift + AV / Input / RDS
1	1
2	2
3	3
PR+ Tv	+ Shift + CH+ /
4	4
5	5
6	6
PR- Tv	+ Shift + CH- /
7	7
8	8
9	9

Original	Replacement
Vol+ Tv	Vol+
Rec	Rec / Rec Mode
0	0
AV Input	AV / Input / RDS
Vol- Tv	Vol-
<< Scan	<< / Tune-
Scan >>	>> / Tune+
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
Pause/Step	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Home	Menu / Home
PR/TRK+	CH+ / Page+
Up	Up
Menu/List	D.Menu / Top
Left	Left





Original	Replacement	Original	Replacement
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	PR/TRK-		CH- / Page-
	Display		Display / Media
	O)/Audio		Audio / Lang I/II
	Title		Sound / Title
	Marker		Fav / Marker / PC
	Clear		Exit / Cancel / Clear
	Red/FAV		Red / Netflix / Search
	Green/Repeat		Green / APP / Repeat
	Yellow/Subtitle		Yellow / YouTube / Repeat
	Blue/Text		Blue / Prime Video / Random
	EPG		Guide / EPG / -/--
	Dubbing		Picture / Format

