 

 

























































 











| Original | Replacement | Original | Replacement |
|---|-------------|---|--------------------|
|  | Power |  | Power |
|  | Function |  | Smart / List |
|  | 1 / CD |  | 1 |
|  | 1 / CD |  | Shift + 3 |
|  | 2 / VCR |  | 2 |
|  | 2 / VCR |  | Shift + 4 |
|  | 3 / DVD |  | 3 |
|  | 3 / DVD |  | Shift + 2 |
|  | 4 |  | 4 |
|  | 5 / SAT |  | 5 |
|  | 5 / SAT |  | Shift + 0 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Sleep |  | Sleep / Timer |
|  | 0 |  | 0 |
|  | DRC |  | Picture / Format |
|  | TUNER |  | TV/Radio / |
|  | TUNER |  | Shift + 6 |
|  | Mo. / St. |  | Sound / Title |
|  | Input Mode |  | AV / Input / RDS |
|  | Volume+ |  | Vol+ |
|  | Volume- |  | Vol- |
|  | Mute |  | Mute / Dimmer |
|  | Menu |  | Menu / Home |
|  | Tuning Mode |  | Guide / EPG / -/-- |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Info |  | Info / Angle |
|  | Sub Woofer |  | Eject / Surround |





| Original | Replacement |
|--------------|-----------------------------|
| Tuner Memory | Fav / Marker / PC |
| Stereo | Audio / Lang I/II |
| SFE.Mode | Green / APP / Repeat |
| PL. II Mode | Yellow / YouTube / Repeat |
| PL II Effect | Blue / Prime Video / Random |
| SPK. Level | Subtitle / EQ |
| Test Tone | Text / Goto |
| RDS Display | Shift + Display / Media |
| PTY+ | Shift + Up |
| PTY Search | Shift + OK |
| PTY- | Shift + Down |
| TA | Shift + Right |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

