













 


 





 


 
 




















 











 




Original	Replacement	Original	Replacement
	On		Power
	Off		Shift + Power
	CH+		CH+ / Page+
	Mute		Mute / Dimmer
	Vol+		Vol+
	CH-		CH- / Page-
	Surr Mode		Smart / List
	Vol-		Vol-
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Info		Info / Angle
	Down		Down
	RTN		Back / Return
	IN 1		1
	IN 2		2
	IN 3		3
	IN 4		4
	IN 5		5
	IN 6		6
	IN 7		7
	IN 8		8
	IN 9		9
	+10		Guide / EPG / -/-
	IN 0		0
	Test		Text / Goto
	SPK A		Red / Netflix / Search
	SPK B		Green / APP / Repeat
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	Play		Play / Slow















 


 





 


 


































	Original	Replacement	Original	Replacement
	 >>	 >> / Tune+		
	 Channel Volume Surr+	 Shift + CH+ /		
	 Channel Volume Cent+	 Shift + Right		
	 Channel Volume Sub	 Shift + Up		
	 Channel Volume Surr-	 Shift + CH- /		
	 Channel Volume Cent -	 Shift + Left		
	 Channel Volume Sub	 Shift + Down		

 


 






 

 








 
















 




Original	Replacement	Original	Replacement
	On		Power
	Off		Shift + Power
	>>		>>  / Preset+
	Mute		Mute / Dimmer
	Vol+		Vol+
	<<		<< / Preset-
	Rand		Red / Netflix / Search
	Vol-		Vol-
	Up		Up
	Menu		D.Menu / Top
	Left		Left
	Enter		OK
	Right		Right
	Disp		Display / Media
	Down		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/-
	0		0
	Prog		TV/Radio /
	Clear		Blue / Prime Video / Random
	RPT		Green / APP / Repeat
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+





Original	Replacement
	 Power
	 +  Shift + Power
	 >>I / Preset+
	 Mute / Dimmer
	 Vol+
	 I<< / Preset-
	 Vol-
	 Up
	 Smart / List
	 Left
	 OK
	 Right
	 Info / Angle
	 Down
	 1
	 2
	 3

Original	Replacement
	 4
	 5
	 6
	 7
	 8
	 9
	 Play / Slow
	 0
	 << / Tune-
	 >> / Tune+

