































Original	Replacement
 Power	 Power
 DVD	 Shift + 2
 Open / Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Return	 Back / Return
 0	 0
 Display	 Display / Media
 Disc Menu	 D.Menu / Top
 Up	 Up

Original	Replacement
 System Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 I<<	 I<< / Preset-
 Down	 Down
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause / Step	 Pause / Step / Freeze
 Marker	 Fav / Marker / PC
 Search	 Red / Netflix / Search
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Angle	 Info / Angle
 Zoom	 Zoom / Size
 Repeat	 Green / APP / Repeat






































Original	Replacement
 Repeat A-B	 Yellow / YouTube / Repeat
 Program	 TV/Radio /
 Clear	 Exit / Cancel / Clear
 Title	 Sound / Title
 Shuffle	 Blue / Prime Video / Random

Original	Replacement





Original	Replacement
	
Power	Power
	
TV / Video	Setup / OPT /
	
VCR	Shift + 4
	
Eject	Eject / Surround
	
1	1
	
2	2
	
3	3
	
4	4
	
5	5
	
6	6
	
7	7
	
8	8
	
9	9
	
0	0
	
Display	Display / Media
	
Up	Up
	
System Menu	Menu / Home

Original	Replacement
	
Left	Left
	
OK	OK
	
Right	Right
	
I<<	I<< / Preset-
	
Down	Down
	
>>I	>>I / Preset+
	
Stop	Stop / Hold
	
Play	Play / Slow
	
Pause / Step	Pause / Step / Freeze
	
Marker	Fav / Marker / PC
	
Search	Red / Netflix / Search
	
Input	AV / Input / RDS
	
Record	Rec / Rec Mode
	
Program	TV/Radio /
	
Clear	Exit / Cancel / Clear
	
Title	Sound / Title
	
Child Lock	Zoom / Size

